


HOW TO MEASURE FOR WINDSCREENS

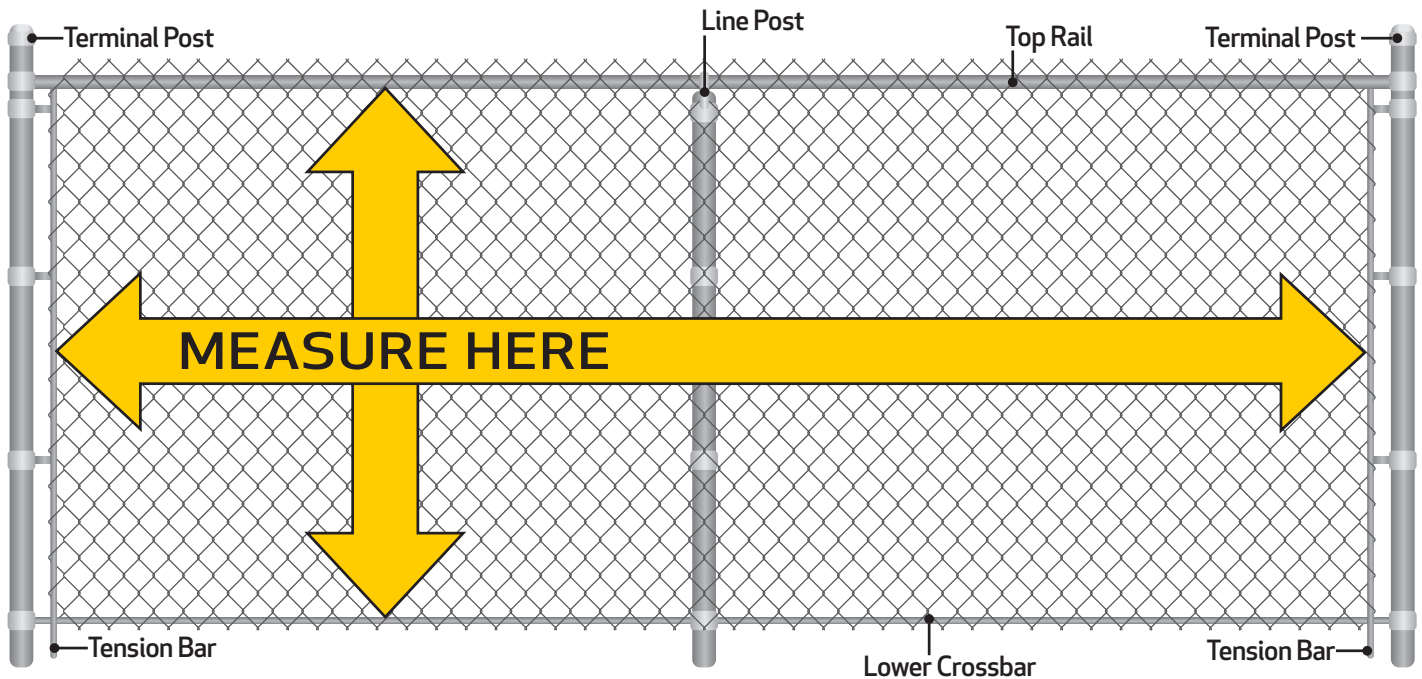

Aer-Flo Sports® windscreens come in a number of styles, grades, heights, lengths and colors. Proper measurements equal proper fittings, which in turn equals a professional appearance that is sure to enhance the look of your facility.

Recommended Steps:

1. Measure Fence Height

- Measure from the bottom of the upper crossbar to the ground.
- Subtract 4 - 6 inches for a consistent height and easier maintenance.
- Do not use a measuring wheel, as it may skip and give inaccurate measurements.

2. Measure Fence Length

- Measure from tension bar to tension bar, subtracting 1 inch for a proper fit.
- For gates and transoms (tennis), measure from the bottom of the upper crossbar to the top of the lower crossbar.

3. Panel Lengths

- Keep panel lengths under 60 feet for easier handling.

With these steps, you're ready to measure your fence accurately for windscreen installation.

TOOLS NEEDED:

- Note pad (preferably with a grid)
- Pencil or pen
- 100' tape measure

Note: Tennis courts have even surfaces, so height remains uniform. Field sports might have uneven ground, causing slight height variations.

▶ If you have questions in the field or need help, call the office and an experienced team member will assist you.

800-823-7356 | AerFloSports.com